

How to...



Disable Siren Tones – 400 Handheld

This instruction set will go over how to disable all siren tones, excluding the airhorn, on the 400 series handheld controller.

Step 1 – Programming:

1. Press and Hold Buttons #2 and #5 until Level 1, Level 2 and Level 3 LEDs flash.
2. Press the SIREN button until the SIREN LED turns on.
3. Turn Aux buttons 4, 5, and 6 off.
4. Press the SIREN button until the Power LED turns on.
5. Turn Aux buttons 4, 5, and 6 off.
6. Press the SIREN button until the SIREN LED and Power LED are both on.
7. Turn Aux buttons 4, 5, and 6 off.
8. Press Radio Rebroadcast


Step 2 – Board Modification

The next step requires modification of the board to prevent the manual button from being activated. It takes about 5 minutes to complete. Be careful not to nick any parts of the board.

First, remove the back cover of the controller. There are 3 screws on the back cover.


Second, remove the 2 screws that are holding the board to the front cover.

Third, locate the manual button on the board. It is at the bottom right corner, and labeled SW-MAN.

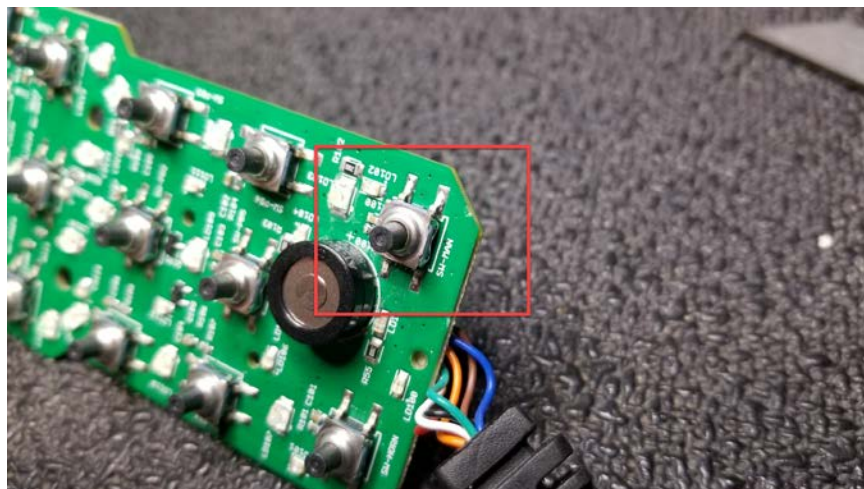

SW-MAN Button

Fourth, using a small pick or razor knife, pry the silver retaining clip up to remove the switch. **Please be very careful not to nick the board.**

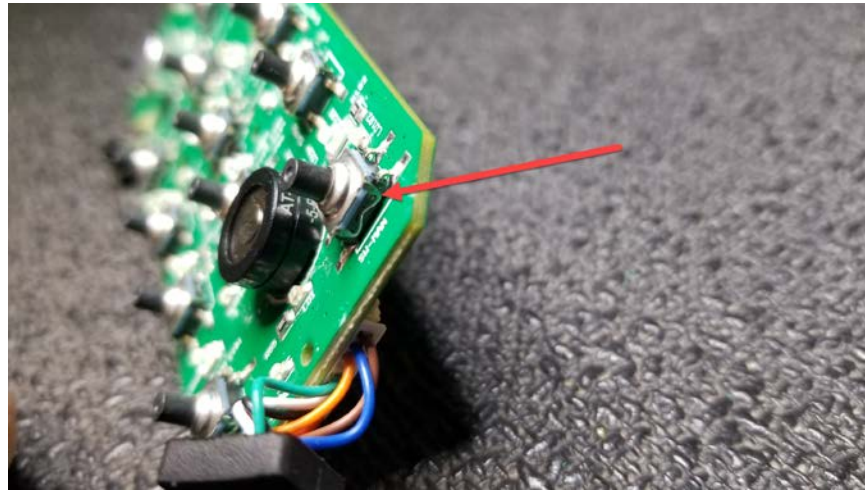

Retaining clip for switch



Switch removed from board

The above picture shows the switch removed from the board. Save the parts for future assembly if needed.

Finally, reverse the disassembly steps to put the unit back together.

Please note: This is a modification to a SoundOff Signal product that can void the product warranty