GHØST.

GHOST® SINGLE/DUAL STACKED SURFACE MOUNT LIGHT

Single Light:

Black Housing: #EGHSTE2(x)B Chrome Housing: #EGHSTE2(x)C White Housing: #EGHSTE2(x)W

Dual Light:

Black Housing: #EGHSTE6(x)B Chrome Housing: #EGHSTE6(x)C White Housing: #EGHSTE6(x)W



- HIGH CURRENT interconnects must be properly terminated. Poor crimp quality can cause heat build-up and fire. Follow crimp connector manufacturer instructions.
- DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to vehicle Owner's Manual for deployment zones.
- Do NOT use system to disconnect headlights, brake lights or other safety equipment.

EGHSTE6(x)W

- Unit may become hot to touch during normal operation.
- Failure to properly install connectors, fuses or wiring may cause vehicle failure or fire.
- Installation must only be performed by trained technician. Installer must determine vehicle wiring configuration and proper integration of system.
- Use proper wire gauge. All power wires connecting to positive (+) or negative (-) battery terminal or local chassis ground (-) must be sized to supply at least 125% of max. current and properly fused at power source.
- Install protective grommets when routing wire through firewall or metal.



OPERATION:

WIRE CONNECTIONS

See setup procedure on second page.

The single and dual GHOST comes equipped with an internal flasher with 3 user selectable patterns that can be synchronized either alternating or simultaneous with up to three other lights.

1. Connect the GHOST BLACK wire to a good, convenient ground.

2. Connect the GHOST RED wire to one side of a user supplied on/off switch. Connect the other side of the switch, through a 5Amp fuse, to a source of +10-30Vdc.

3. Cruise mode is activated by applying power to BROWN wire while RED wire is powered. NOTE: Cruise mode is STEADY-ON at 20% light output.

4. To sync lights and make pattern selections see reverse side.

WIRE HOOK-UP TABLE	
WIRE COLOR:	CONNECT TO:
RED	+10-30Vdc
BLACK	Ground (-)
WHITE	ID/Pattern Select
BROWN WIRE	+10-30Vdc



SoundOff Signal IIIIII ®

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices.

INSTALLATION:

spacing.

Establish a position on the vehicle. Use

screws. Note: pilot holes are 4-7/8" on

center. Caution: Do not stretch gasket

as this may change the required hole

TECHNICAL

SPECIFICATIONS

Overall Dimensions:

Current Consumption:

.075 Amps max/ module*

of LEDs:

Single 6 Generation 3 LEDs

Single

Dual

Dual

Operating

Temperature:

Flash Patterns:

Input Voltage:

5.65" L x 1.06" H

x 1.8 ″ D 5.5″ L x 2.5″ H

x 1 ″ D

10 - 30 Vdc

12 Generation 3 LEDs

 -40° to $+65^{\circ}$ C

33

the gasket (provided) as a template to drill $\emptyset^{1/2}$ wire hole and pilot holes for mounting

Improper use or installation may void warranty coverage. To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/support/. If you have questions regarding this product, contact Technical Services, Monday - Friday, 8 a.m. to 5 p.m. or after hours 5 p.m. to 8 p.m. EST at 1.800338.7337 (press #4 to skip the automated message). Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsigal.com.

1.800.338.7337 / www.soundoffsignal.com

103

GHOST® SINGLE/DUAL STACKED SURFACE MOUNT LIGHT

Single Light:

Black Housing:	#EGHSTE2(x)B
Chrome Housing:	#EGHSTE2(x)C
White Housing:	#EGHSTE2(x)W

Dual Light:

Black Housing:	#EGHSTE6(x)B
Chrome Housing:	
White Housing:	#EGHSTE6(x)W

NOTE:

in the field. Any attempt to gain access to the GHOST unit will most likely cause permanent damage and void its warranty.

ECE GHOST Sync Configuration Instructions IMPORTANT! A MAXIMUM OF 4 SINGLE OR 2 DUAL LIGHTS **CAN BE SYNCED TOGETHER**

1. Set ID#

- a. Identify which pattern and sequence you want and look up ID# settings at right.
- b. Connections
- RED: +12Vdci.
- WHT: +12Vdc (Note: you will need to disconnect after ii. power is applied)
- iii. BLK: Ground
- c. Apply power to unit
- d. Without disconnecting power from unit, disconnect WHT wire
- e. Momentarily connect WHT to Ground to change ID #
 - Identify ID# by number of sequential flashes
 - ii. Possible ID#s: 1 4
- f. Disconnect power from unit to get out of ID mode.
- 2. Set Pattern
 - a. Reapply power to units.
 - b. Once all Light Head ID#s are configured, make sure all lights are flashing the same pattern
 - c. Connect corresponding colored wires of all units together: RED to RED, etc.
 - d. Change Pattern
 - Momentarily touch WHT wires to Ground i.
 - ii. Observe pattern change on all lights connected
 - e. Insulate all wires by taping with electrical tape
- 3. Connect Master Switch for Application
 - a. IMPORTANT! Ensure WHT Pattern/Sync Wires are tied together

The GHOST is a factory sealed unit that CANNOT be serviced

1 LIGHT

Single Light Operation: Follow the ID Selection steps and set the ECE GHOST to ID#1 if it is not already.

2 LIGHTS

ALTERNATING: To obtain Alternating patterns, follow the ID SELECTION steps and set one ECE GHOST to ID#1 and the other to ID#3. Then proceed to the PATTERN SELECTION steps.

SIMULTANEOUS: To obtain Simultaneous patterns, follow the ID SELECTION steps and set both ECE GHOST lights to ID#1. Then proceed to PATTERN SELECTION steps.

SLAVE MODE

GHOST does not support Slave Mode.

PATTERN RESET

- 1. Remove power
- 2. Place WHITE (sync) wire to ground
- 3. With svnc wire arounded, re-power RED wire
- 4. Maintain for one second (light will dim)
- 5. Remove power and ground (pattern 1 set)

Flash Patterns		
	FPM	
Flash Patterns	(Flashes per Minute)	
1. Single	125	
2. Double	125	
3. Triple	123	

