
ULTRALITE PLUS INTERIOR WARNING BAR WINDSHIELD LIGHT

EL3PHØ2AØ+(x)



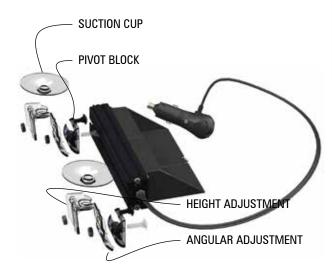

△ WARNING

Please see reverse for Technical Specifications

- •HIGH CURRENT interconnects must be properly terminated. Poor crimp quality can cause heat build-up and fire. Follow crimp connector manufacturer instructions.
- DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to vehicle Owner's Manual for deployment zones.
- Do NOT use system to disconnect headlights, brake lights or other safety equipment.
- Unit may become hot to touch during normal operation.
- Failure to properly install connectors, fuses or wiring may cause vehicle failure or fire.
- •Installation must only be performed by trained technician. Installer must determine vehicle wiring configuration and proper integration of system.
- Use proper wire gauge. All power wires connecting to positive (+) or negative (-) battery terminal or local chassis ground (-) must be sized to supply at least 125% of max. current and properly fused at power source.
- Install protective grommets when routing wire through firewall or metal.

NOTICE:

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices.

Improper use or installation may void warranty coverage.

To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/tech-services/returns/.

If you have questions regarding this product, contact Technical Services, Monday - Friday, 8 a.m. to 5 p.m. or after hours 5 p.m. to 8 p.m. ET at 1.800.338.7337 (press #4).

Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsignal.com.

SUPPLIED BAR MOUNTING HARDWARE
UNIVERSAL BRACKET

NO



SUPERIOR CUSTOMER RELATIONSHIPS. SMARTLY DESIGNED LIGHTING & ELECTRONIC SOLUTIONS.

INSTALLATION:

back of the light.

Important: DO NOT over tighten

mounting screws or nuts. This could

cause permanent damage to the unit.
Use hardware supplied for mounting.

1. Assemble the UltraLITE as shown in

the exploded illustration by inserting

the carriage bolt in the channel on the

adjustment arm on the bolt and

2. Install the pivot block and the angular

3. Install the head adjustment arm as shown and lightly secure with nut.

Press suction cups to windshield assuring that unit is not located where it obstructs the driver's vision or in the area of air-bag deployment.

6. Make sure the light is horizontal and

7. Plug cigarette plug into receptacle

For your convenience a universal

This product contains high intensity LED devices.

To prevent eye damage, DO NOT stare into the

light beam at close range.

bracket is supplied if a deck mount

and refer to operation instructions to

loosely secure with a nut.

4. Snap suction cups into place.

carefully tighten all nuts.

application is desired.

activate light.

ULTRALITE PLUS INTERIOR WARNING BAR WINDSHIELD LIGHT

EL3PHØ2AØ+(x)

TECHNICAL SPECIFICATIONS	
Overall Dimensions:	6.9"L x 1.54"H x 3.56"D
Flash Patterns:	33 flash patterns
Input Voltage Range:	10 - 16 Vdc
Current Consumption:	<1 amp*
# of LEDs:	6 Generation 3 LEDs
Operating Temperature:	-40° to +65° C

*Pattern Dependent



Flash Patterns FPM Alternating Patterns (Flashes per Minute) 1. Quint 70 2. Warp 350 3. Inter-Cycle Flash 4. Double Flash 70 5. Quad Flash 80 6. Power Pulse 180 7. RoadRunner 113 8. Q-Switch 9. RoadRunner Steady Burn 113 10. Quad Steady Burn 80 11. E-Ideal Single Flash 200 12. E-Ideal Double Flash 146 13. Quad2 Flash 67 14. Double2 Flash 95 15. X-Warp 16. X-Double 17. PowerRunner 18. LCR Quint 19. Warp³ 20. UltraWarp 545 21. Thunder and Lightning 22. LiteSpeed 85 23. SuperSonic 170 24. LCR LiteSpeed 25. SuperSonic Ultra 26. TempoShift 27. TempoShift Warp 28. SBE2 67 29. C² 200 30. U² 176 31. UltraGlow 32. Cyclone 33. Chameleon

OPERATION:

- 1. Plug the 12V adaptor into the appropriate receptacle and turn plug switch ON.
- 2. Press the button for less than one second (momentary) to move forward one pattern.
- 3. Press and hold the button for one second (until the lights dim) to move to the first pattern.
- 4. Press and hold the button for more than two seconds (until the lights turn off) to turn off the UltraLITE.
- 5. To turn the unit back on, press the button again.