


WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.

ULTRALITE PLUS INTERIOR WARNING BAR 8 MODULE BAR ASSEMBLY INSTRUCTIONS EL3PH08A00(x)

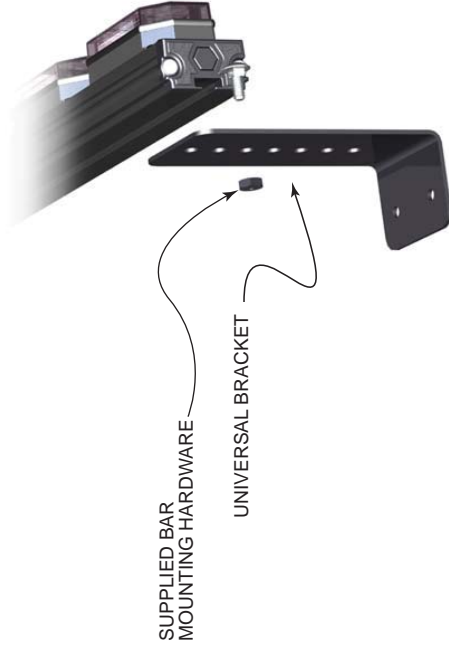

MOUNTING INSTRUCTIONS

Before starting the installation make certain you have the correct bracket for your application. A universal Deck/Dash mount bracket is supplied. For other mounting brackets, see product literature or visit our website.

Install the UltraLITE by following the assembly instructions provided with the brackets and check for security.

Important: DO NOT over tighten mounting screws or nuts. This could cause permanent damage to the light or bracket. Use appropriate hardware for mounting.


Universal bracket shown is supplied but mounting shcrews are customer supplied.

PATTERN SELECTION

Because of the variety of configuring options see separate sheets for detailed instructions

WIRE HOOK-UP TABLE	
Wire Color	Connect to:
Blue	Input 1 / Left Input
Green	Input 2 / Right Input
Brown	Input 3 / Warning Input
Red	+12Vdc
Black	Ground (-)
White	Pattern Select

Input Voltage: 10-16Vdc
Current: 4 Amps Maximum

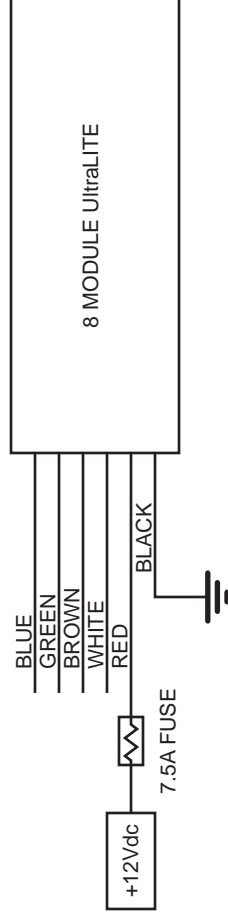



3900 Central Parkway
 Hudsonville, MI 49426
 toll free 800.338.7337
 office 616.896.7100
 techsupport@soundoffsignal.com
 www.soundoffsignal.com

⚠ WARNING

This product contains high intensity LED devices.
 To prevent eye damage, DO NOT stare into light
 beam at close range.

ULTRALITE PLUS INTERIOR WARNING BAR 8 MODULE BAR FULL DIRECTIONAL ARROW CONFIGURATION INSTRUCTIONS EL3PH08A00(x)



ARROW PATTERNS



1	Solid	Fast	High Power
2	Solid Plus	Fast	High Power
3	Sequential	Fast	High Power
4	Sequential2 (2 lights)	Fast	High Power
5	Chaser	Fast	High Power
6	Solid	Slow	High Power
7	Solid Plus	Slow	High Power
8	Sequential	Slow	High Power
9	Sequential2 (2 lights)	Slow	High Power
10	Chaser	Slow	High Power
11	Solid	Fast	Low Power
12	Solid Plus	Fast	Low Power
13	Sequential	Fast	Low Power
14	Sequential2 (2 lights)	Fast	Low Power
15	Chaser	Fast	Low Power
16	Solid	Slow	Low Power
17	Solid Plus	Slow	Low Power
18	Sequential	Slow	Low Power
19	Sequential2 (2 lights)	Slow	Low Power
20	Chaser	Slow	Low Power

ARROW WARNING PATTERNS

1	Double	Left and Right (Alternating)
2	Double	Every Other Module
3	Q-Switch™	Left and Right (Alternating)
4	Q-Switch™	Every Other (Alternating)
5	Power Pulse	Every Other (Alternating)
6	Power Pulse	Left and Right (Alternating)
7	Quad	Outer and Inner (Alternating)
8	Warp	Every Other (Alternating)
9	Crossfire	
10	HyperScan	
11	SuperScan	
12	Power Flash	

Alternating: 1,2,3,4 alternates with 5,6,7,8
 Every Other: 1,3,5,7 alternates with 2,4,6,8

PATTERN SELECTION

1. Connect BLACK wire to ground.
2. Connect RED wire to +12VDC.
3. Connect GREEN, BLUE and BROWN wires to +12VDC.
4. With power applied to the three wires, momentarily apply power to WHITE wire to change the directional arrow patterns.
5. While changing patterns, the UltraLITE will display the left arrow pattern.
6. When you have chosen the directional pattern, disconnect GREEN and BLUE wires from power.
7. With the BROWN wire hooked up to power, momentarily apply power to WHITE wire to change the arrow warning pattern.
8. When you have selected the arrow warning pattern, disconnect BROWN wire from power.
9. You are finished configuring the UltraLITE.



3900 Central Parkway
 Hudsonville, MI 49426
 toll free 800.338.7337
 office 616.896.7100
 techsupport@soundoffsignal.com
 www.soundoffsignal.com

WARNING: Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

⚠ WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.

ULTRALITE PLUS INTERIOR WARNING BAR 8 MODULE BAR DIRECTIONAL ARROW W/ WARNING TIPS CONFIGURATION INSTRUCTIONS EL3PH08A10(x) EL3PH08B10(x)



PATTERN SELECTION

1. Connect BLACK wire to ground.
2. Connect RED wire to +12VDC.
3. Connect GREEN and BLUE wires to +12VDC.
4. With power applied to the two wires momentarily apply power to WHITE wire to change the directional arrow patterns.
5. While changing patterns, the UltraLITE will display the left arrow pattern.
6. When you have chosen the directional arrow pattern, disconnect GREEN and BLUE wires from power.
7. Connect BROWN wire to +12VDC and momentarily apply +12VDC to WHITE wire to change the warning pattern displayed on the UltraLITE.
8. When you have selected the warning pattern for the UltraLITE, disconnect BROWN wire from power.
9. You are finished configuring the UltraLITE.

ARROW PATTERNS for

1	Solid	Fast	High Power
2	Solid Plus	Fast	High Power
3	Sequential	Fast	High Power
4	Sequential2 (2 lights)	Fast	High Power
5	Solid	Slow	High Power
6	Solid Plus	Slow	High Power
7	Sequential	Slow	High Power
8	Sequential2 (2 lights)	Slow	High Power
9	Solid	Fast	Low Power
10	Solid Plus	Fast	Low Power
11	Sequential	Fast	Low Power
12	Sequential2 (2 lights)	Fast	Low Power
13	Solid	Slow	Low Power
14	Solid Plus	Slow	Low Power
15	Sequential	Slow	Low Power
16	Sequential2 (2 lights)	Slow	Low Power

PART NUMBER:
 EL3PH08A10(x): warning tips flash in both warning mode and directional mode.

PART NUMBER:
 EL3PH08B10(x): warning tips flash only when warning mode is selected.

SINGLE END MODULE WARNING PATTERNS

1	Traffic Mover	Simultaneous
2	Q-Switch™	Alternating
3	RoadRunner™	Alternating
4	PowerPulse™	Alternating
5	Progressive	Alternating

Simultaneous: 1 and 8 together
 Alternating: 1 alternates with 8



3900 Central Parkway
 Hudsonville, MI 49426
 toll free 800.338.7337
 office 616.896.7100
 techsupport@soundoffsignal.com
 www.soundoffsignal.com

WARNING: Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.



FLASH PATTERNS

1	Quint Flash	Alternating
2	Warp Flash	Alternating
3	Inter-cycle Flash	Alternating
4	Double Flash	Alternating
5	Quad Flash	Alternating
6	3 Flashes / Second	Alternating
7	3 Flashes / Second	Simultaneous
8	Q-Switch™	Alternating
9	E-Pattern Single Flash	Alternating
10	E-Pattern Double Flash	Alternating
11	E-Pattern Single Flash	Simultaneous
14	E-Pattern Double Flash	Simultaneous
15	LiteRyder	Sweep
16	Inter-cycle Flash	Every Other Module
17	Double Flash	Every Other Module
18	Quad Flash	Every Other Module
19	Q-Switch™	Every Other Module

Alternating: 1,2,3,4 alternates with 5,6,7,8
 Simultaneous: All modules on at same time
 Every Other: 1,3,5,7 alternates with 2,4,6,8

PATTERN SELECTION

1. Connect BLACK wire to ground.
2. Connect RED wire to +12VDC power.
3. Connect BLUE wire to +12VDC power.
4. With power applied to BLUE wire, momentarily apply power to WHITE wire to move forward one warning pattern.
5. When you have chosen your first warning pattern, disconnect BLUE wire from power.
6. The pattern you have selected will always display on the UltraLITE when power is applied to the BLUE wire.
7. To setup your next warning pattern, connect GREEN wire to power.
8. With power applied to the GREEN wire, momentarily apply power to WHITE wire to move forward one warning pattern.
9. When you have chosen your second warning pattern, disconnect GREEN wire from power.
10. The pattern you have selected will always display on the UltraLITE when power is applied to the GREEN wire.
11. To setup the last warning pattern, connect BROWN wire to power.
12. With power applied to the BROWN wire, momentarily apply power to WHITE wire to move forward one warning pattern.
13. When you have chosen your third warning pattern disconnect BROWN wire from power.
14. The pattern you have selected will always be displayed on the UltraLITE when power is applied to the BROWN wire.
15. You are finished configuring the UltraLITE.

ULTRALITE PLUS INTERIOR WARNING BAR 8 MODULE BAR 4+4 SPLIT WARNING CONFIGURATION INSTRUCTIONS EL3PH08A00(x)

