



3900 Central Parkway
 Hudsonville, MI 49426
 toll free 800.338.7337
 office 616.896.7100
 techsupport@soundoffsignal.com
 www.soundoffsignal.com

WARNING: Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

MOUNTING INSTRUCTIONS

Before starting the installation make certain you have the correct bracket (sold separately except for the universal bracket which is included) for your application.

Install the UltraLITE by following the assembly instructions provided with the brackets and check for security.

Important: DO NOT over tighten mounting screws or nuts. This could cause permanent damage to the light or bracket. Use appropriate hardware for mounting.

PATTERN SELECTION


Because of the variety of configuring options see separate sheets for detailed instructions

⚠ WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into light beam at close range.




Interior Warning Bar
8 MODULE BAR
 ASSEMBLY INSTRUCTIONS
 EL3Z08A00(x)

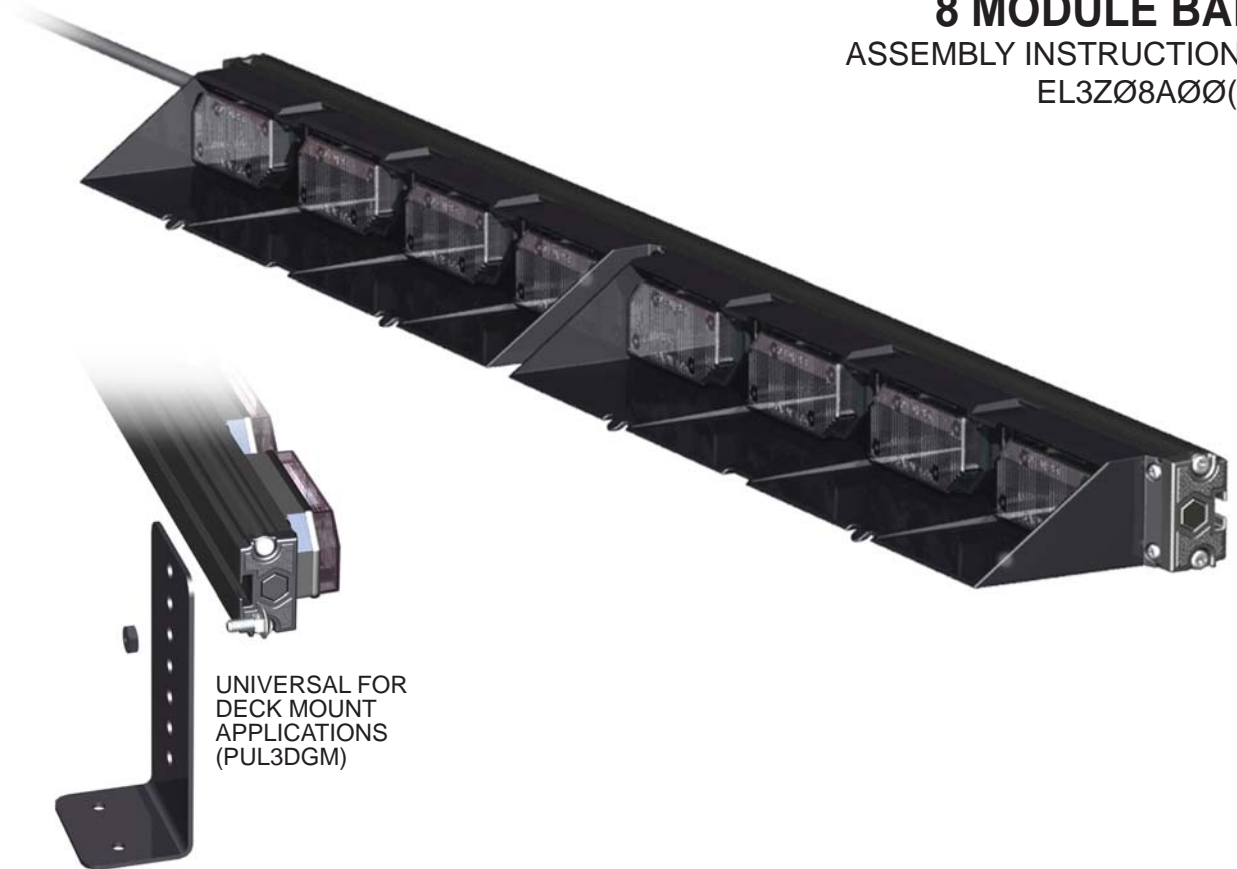

UNIVERSAL FOR DECK MOUNT APPLICATIONS (PUL3DGM)

| WIRE HOOK-UP TABLE | |
|-------------------------------|-------------------------|
| Wire Color Connect to: | |
| Blue | Input 1 / Left Input |
| Green | Input 2 / Right Input |
| Brown | Input 3 / Warning Input |
| Red | +12Vdc |
| Black | Ground (-) |
| White | Pattern Select |

Input Voltage: 10-16Vdc
 Current: 4 Amps Maximum

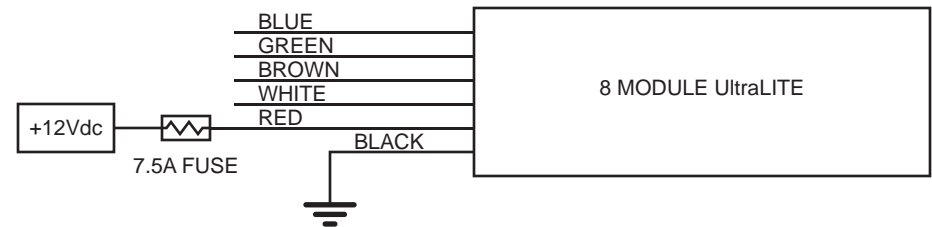



3900 Central Parkway
 Hudsonville, MI 49426
 toll free 800.338.7337
 office 616.896.7100
 techsupport@soundoffsignal.com
 www.soundoffsignal.com

⚠ WARNING

This product contains high intensity LED devices.
 To prevent eye damage, DO NOT stare into light beam at close range.



Interior Warning Bar

8 MODULE BAR
FULL DIRECTIONAL ARROW
 CONFIGURATION INSTRUCTIONS
 EL3Z08A00(x)

WARNING: Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.



PATTERN SELECTION

1. Connect BLACK wire to ground.
2. Connect RED wire to +12VDC.
3. Connect GREEN, BLUE and BROWN wires to +12VDC.
4. With power applied to the three wires, momentarily apply power to WHITE wire to change the directional arrow patterns.
5. While changing patterns, the UltraLITE will display the left arrow pattern.
6. When you have chosen the directional pattern, disconnect GREEN and BLUE wires from power.
7. With the BROWN wire hooked up to power, momentarily apply power to WHITE wire to change the arrow warning pattern.
8. When you have selected the arrow warning pattern, disconnect BROWN wire from power.
9. You are finished configuring the UltraLITE.



UNIVERSAL FOR DECK MOUNT APPLICATIONS (PUL3DGM)



ARROW PATTERNS

| | | | |
|----|------------------------|------|------------|
| 1 | Solid | Fast | High Power |
| 2 | Solid Plus | Fast | High Power |
| 3 | Sequential | Fast | High Power |
| 4 | Sequential2 (2 lights) | Fast | High Power |
| 5 | Chaser | Fast | High Power |
| 6 | Solid | Slow | High Power |
| 7 | Solid Plus | Slow | High Power |
| 8 | Sequential | Slow | High Power |
| 9 | Sequential2 (2 lights) | Slow | High Power |
| 10 | Chaser | Slow | High Power |
| 11 | Solid | Fast | Low Power |
| 12 | Solid Plus | Fast | Low Power |
| 13 | Sequential | Fast | Low Power |
| 14 | Sequential2 (2 lights) | Fast | Low Power |
| 15 | Chaser | Fast | Low Power |
| 16 | Solid | Slow | Low Power |
| 17 | Solid Plus | Slow | Low Power |
| 18 | Sequential | Slow | Low Power |
| 19 | Sequential2 (2 lights) | Slow | Low Power |
| 20 | Chaser | Slow | Low Power |

ARROW WARNING PATTERNS

| | | |
|----|-------------|-------------------------------|
| 1 | Double | Left and Right (Alternating) |
| 2 | Double | Every Other Module |
| 3 | Q-Switch | Left and Right (Alternating) |
| 4 | Q-Switch | Every Other (Alternating) |
| 5 | Power Pulse | Every Other (Alternating) |
| 6 | Power Pulse | Left and Right (Alternating) |
| 7 | Quad | Outer and Inner (Alternating) |
| 8 | Warp | Every Other (Alternating) |
| 9 | Crossfire | |
| 10 | HyperScan | |
| 11 | SuperScan | |
| 12 | Power Flash | |

Alternating: 1,2,3,4 alternates with 5,6,7,8
 Every Other: 1,3,5,7 alternates with 2,4,6,8



3900 Central Parkway
 Hudsonville, MI 49426
 toll free 800.338.7337
 office 616.896.7100

techsupport@soundoffsignal.com
 www.soundoffsignal.com

⚠ WARNING

This product contains high intensity LED devices.
 To prevent eye damage, DO NOT stare into light beam at close range.



Interior Warning Bar

8 MODULE BAR
4+4 SPLIT WARNING

CONFIGURATION INSTRUCTIONS
 EL3Z08A00(x)



WARNING: Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

PATTERN SELECTION

1. Connect BLACK wire to ground.
2. Connect RED wire to +12VDC power.
3. Connect BLUE wire to +12VDC power.
4. With power applied to BLUE wire, momentarily apply power to WHITE wire to move forward one warning pattern.
5. When you have chosen your first warning pattern, disconnect BLUE wire from power.
6. The pattern you have selected will always display on the UltraLITE when power is applied to the BLUE wire.
7. To setup your next warning pattern, connect GREEN wire to power.
8. With power applied to the GREEN wire, momentarily apply power to WHITE wire to move forward one warning pattern.
9. When you have chosen you second warning pattern, disconnect GREEN wire from power.
10. The pattern you have selected will always display on the UltraLITE when power is applied to the GREEN wire.
11. To setup the last warning pattern, connect BROWN wire to power.
12. With power applied to the BROWN wire, momentarily apply power to WHITE wire to move forward one warning pattern.
13. When you have chosen your third warning pattern disconnect BROWN wire from power.
14. The pattern you have selected will always be displayed on the UltraLITE when power is applied to the BROWN wire.
15. You are finished configuring the UltraLITE.



UNIVERSAL FOR
 DECK MOUNT
 APPLICATIONS
 (PUL3DGM)

FLASH PATTERNS

| | | |
|----|------------------------|--------------------|
| 1 | Quint Flash | Alternating |
| 2 | Warp Flash | Alternating |
| 3 | Inter-cycle Flash | Alternating |
| 4 | Double Flash | Alternating |
| 5 | Quad Flash | Alternating |
| 6 | 3 Flashes / Second | Alternating |
| 7 | 3 Flashes / Second | Simultaneous |
| 8 | Q-Switch | Alternating |
| 9 | E-Pattern Single Flash | Alternating |
| 10 | E-Pattern Double Flash | Alternating |
| 11 | E-Pattern Single Flash | Simultaneous |
| 14 | E-Pattern Double Flash | Simultaneous |
| 15 | LiteRyder | Sweep |
| 16 | Inter-cycle Flash | Every Other Module |
| 17 | Double Flash | Every Other Module |
| 18 | Quad Flash | Every Other Module |
| 19 | Q-Switch | Every Other Module |

Alternating: 1,2,3,4 alternates with 5,6,7,8
 Simultaneous: All modules on at same time
 Every Other: 1,3,5,7 alternates with 2,4,6,8