




3900 Central Parkway
Hudsonville, MI 49426
toll free 800.338.7337
office 616.896.7100

techsupport@soundoffsignal.com
www.soundoffsignal.com

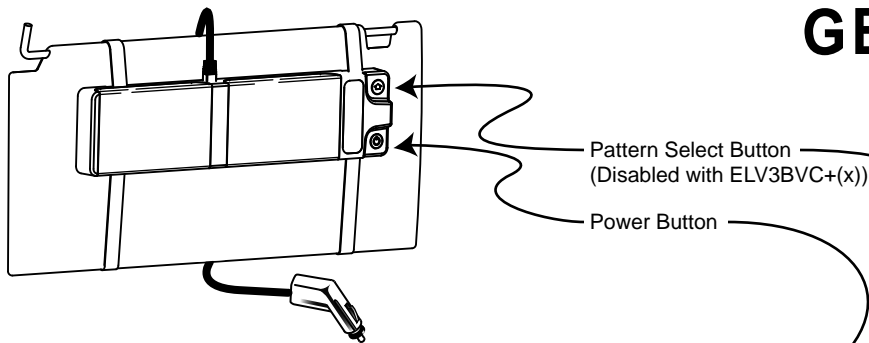

NOTE: Attach LED VISOR LIGHT to PASSENGER SIDE visor ONLY


TECHNICAL SPECIFICATIONS

Input Voltage Range: 10-30Vdc
Current Draw: 0.75@12.8Vdc,
0.35@25.6Vdc
Reverse Polarity: Protected
Transient: Protected
Operating Temperature: 40° to 65°C
Standby Current: 25mA@12.8Vdc,
35mA@25.6Vdc

OPERATING INSTRUCTIONS


1. Plug the LED VISOR LIGHT power cord into the vehicle cigarette lighter or 12vdc Power receptacle outlet.
Note: The electrical protection fuse (10 amp-type AGC) is located in the nose of the cigarette lighter plug (not shown). Unscrew the plastic retaining ring to expose fuse.
2. To activate the light press the "power" button located on the front of the unit.
3. To deactivate the light push the power button.
4. The LED VISOR LIGHT can generate 16 different light patterns. To change light patterns, momentarily press the white "Arrow" button to advance the pattern. Flash patterns are listed on this sheet and on the back of the LED VISOR LIGHT housing.

Note: The LED Visor Light will memorize the power-down state. It can be connected to a master power switch and the Visor Light will turn on without having to press the power button.

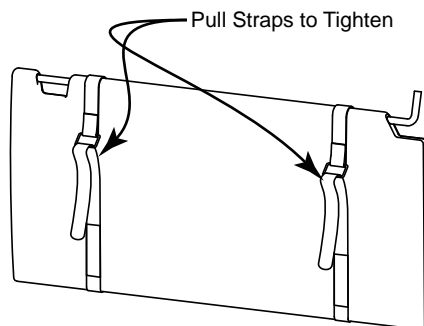

GENERATION 3 LED VISOR LIGHT

ELV3BVS+(x) (Standard)
ELV3BVC+(x) (California)

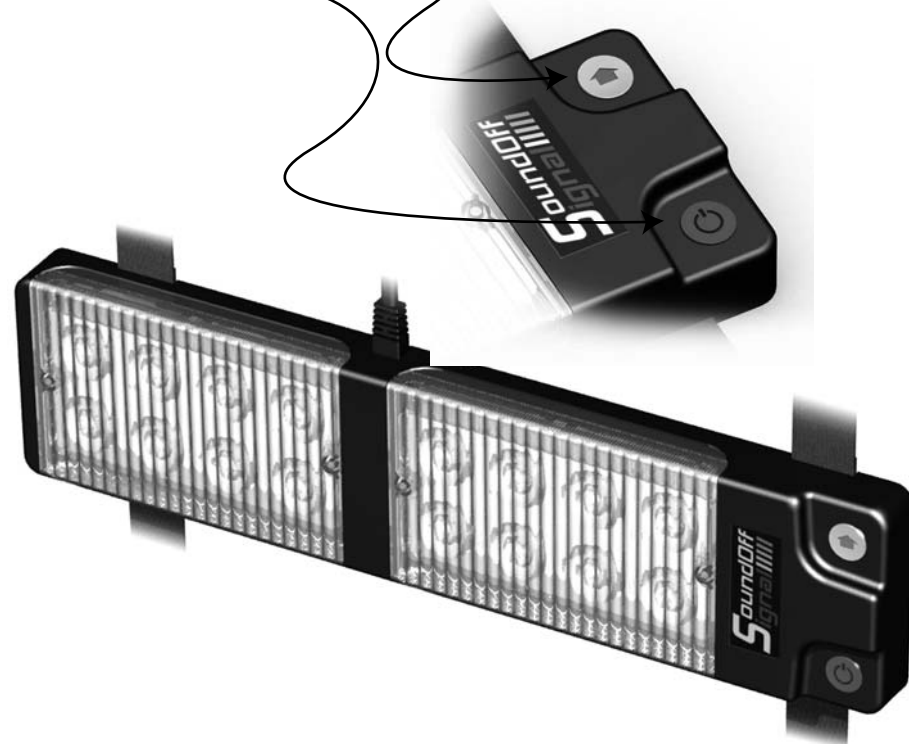

MOUNTING LED VISOR LIGHT

Important Note: LED VISOR LIGHT must be properly installed to prevent the unit from coming loose during braking or maneuvering.

Note: Attach LED VISOR LIGHT to passenger side visor ONLY.

1. Position the LED VISOR LIGHT with the power cord toward the top of the vehicle, and the back of the unit against the vehicle's passenger side visor. Note: The visor must be in the down position.
2. Pivot the visor down and secure the LED VISOR LIGHT by passing the end of one Velcro™ strap through the buckle on the other end of the same strap. Pull the loose end of the strap to tighten and then attach the loose end to the buckle side strap to secure. Repeat for the opposite side. Return the vehicle's visor to the stored position.

Note: California Visor Light (ELV3BVC+(x)) has only one (1) flash pattern available: Driver Side-steady burn/Passenger Side-Quint Flash. Pattern select button is disabled.

FLASH PATTERNS for VISOR LIGHT [ELV3BVS+(x)]		
1	Quint Flash	Both lights alternating
2	Warp Flash	" " "
3	Inter-Cycle Flash	" " "
4	Double Flash	" " "
5	Quad Flash	" " "
6	3 Flashes / Second	" " "
7	3 Flashes / Second	Both lights operating simultaneously
8	Q-Switch Pattern	Both lights alternating
9	Driver Side Steady Burn	Passenger side Double Flash
10	Driver Side Steady Burn	Passenger side Quad Flash
11	Driver Side Steady Burn	Passenger side Quint Flash
12	Driver Side Steady Burn	Passenger side Warp Flash
13	E-Pattern Single Flash	Both lights alternating
14	E-Pattern Double Flash	" " "
15	E-Pattern Single Flash	Both lights operating simultaneously
16	E-Pattern Double Flash	" " "

FLASH PATTERN for VISOR LIGHT [ELV3BVC+(x)]	
Driver Side Steady Burn	Passenger side Quint Flash