

## 100% SOLID STATE TURN SIGNAL / HAZARD FLASHER (ETTS00)

Congratulations! You are now the proud owner of the most technically advanced true 100% Solid State Turn Signal / Hazard Flasher System in the market today. Add to it our never ending commitment to quality, this new flasher system will provide you with years of dependable trouble free service.

The Turn Signal / Hazard Flasher can be installed to function as either a Turn Signal Flasher or Hazard Flasher. A properly installed unit will flash a maximum of eight 32 watt lights (per side) at a constant flash rate of 1.5 flashes per second on a 12 Vdc negative ground system.

### INSTALLATION

#### TURN SIGNAL FLASHER:

**MOUNTING:** Mount the flasher so that the maximum amount of air will flow across it, typically close to the battery at the front of the engine compartment.

**GREEN WIRE:** Connect to ground.

#### NOTE

Always connect the green wire to ground **FIRST** when installing and disconnect **LAST** when removing!

**BLUE WIRE:** Connect the blue wire to the turn signal switch on the steering column. Up to eight 32 watt lights can be attached to each side of the switch.

**WHITE WIRE:** Connect through a 20 amp fuse directly to the positive post of the battery or other high current power source. We recommend the use of a fuse **ONLY** - **DO NOT CONNECT THE FLASHER SYSTEM TO A CIRCUIT BREAKER OR FUSIBLE LINK.**


#### HAZARD FLASHER:

**MOUNTING:** Mount the flasher so that the maximum amount of air will flow across it, typically close to the battery at the front of the engine compartment.

**GREEN WIRE:** Connect to ground.

#### NOTE

Always connect the green wire to ground **FIRST** when installing and disconnect **LAST** when removing!

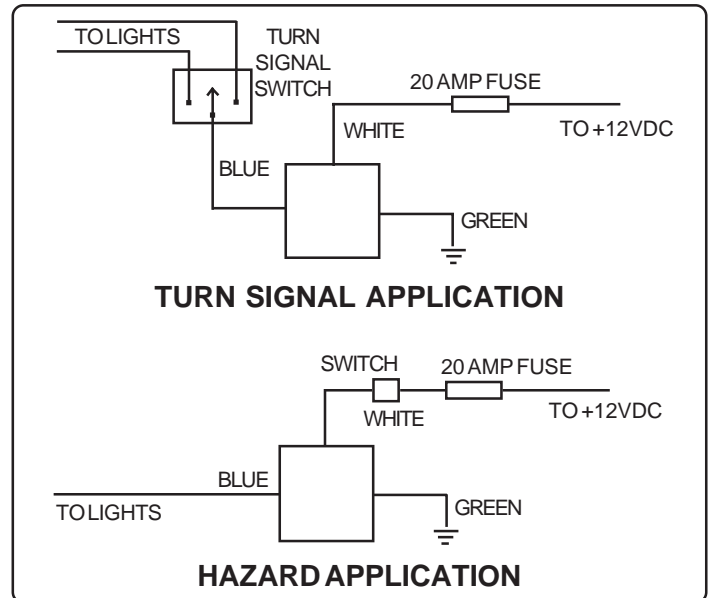

**BLUE WIRE:** Connect to a maximum of eight 32 watt lights.

**WHITE WIRE:** Connect through a switch and a 20 amp fuse directly to the positive post of the battery or other high current power source. We recommend the use of a fuse **ONLY** - **DO NOT CONNECT THE FLASHER SYSTEM TO A CIRCUIT BREAKER OR FUSIBLE LINK.**

#### NOTE

Welding on ANY vehicle creates voltage spikes that may destroy this flasher system and void its warranty. Disconnect ALL connections before welding on the vehicle or frame, or wait to install the flasher after welding is completed.

### WARRANTY

SoundOff Signal warrants the ETTS00 Solid State Electronic Flasher System for five (5) years from the date of purchase to the original purchaser against any manufactured defects or workmanship. This warranty applies only to units installed according to manufacturer's installation instructions and operated within the units specifications. SoundOff Signal's obligation under this warranty is limited to repairing or exchanging the unit. Exchanging units under this warranty is as follows: 100% of the purchase price for the first 2 years, 75% of the purchase price the 3rd year, 50% of the purchase price the 4th year and 25% of the purchase price the 5th year. Warranty is void if the unit was installed incorrectly or maliciously damaged. All warranty claims must be accompanied by a dated proof of purchase. SoundOff Signal retains the right to be the sole mediator of what constitutes defects in performance or manufacturing.