


Intersecor

INTERSECTOR LED LIGHT

- #ENT2B3(xx) Single Light Kit
- #ENT2B3(xx)-EU Single Light Kit

US Design Patent No. D636,113
Other Patents Pending

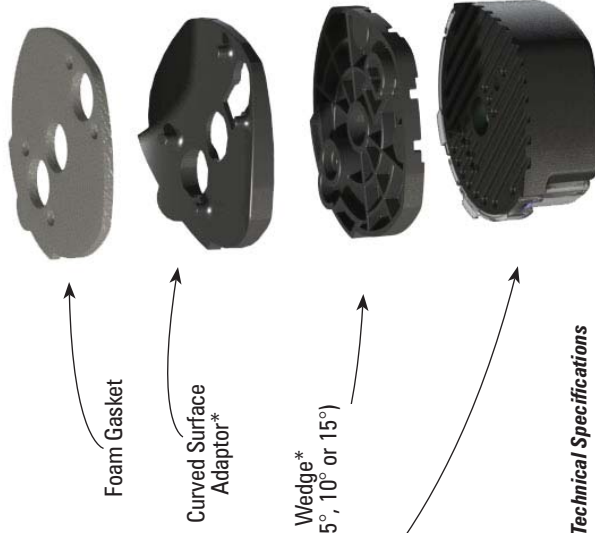

*For Charger & Caprice 2011 + installations the Curved Surface Adaptor (#PNTCRVØ1) and Angled Wedge Block (#PNT1WVDG) must be replaced with Caprice 2011 + or Charger 2011 + Curved Surface Adaptor Sets (purchased separately, see last page for Part Numbers).

WARNING Please see last page for Technical Specifications

- HIGH CURRENT interconnects must be properly terminated. Poor crimp quality can cause heat build-up and fire. Follow crimp connector manufacturer instructions.
- DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to vehicle Owner's Manual for deployment zones.
- Unit may become hot to touch during normal operation.
- Failure to properly install connectors, fuses or wiring may cause vehicle failure or fire.
- Installation must only be performed by trained technician. Installer must determine vehicle wiring configuration and proper integration of system.
- Use proper wire gauge. All power wires connecting to positive (+) or negative (-) battery terminal or local chassis ground (-) must be sized to supply at least 125% of max. current and properly fused at power source.
- Install protective grommets when routing wire through firewall or metal.



Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices.

Improper use or installation may void warranty coverage. To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/sales-support. If you have questions regarding this product, contact **Technical Services**, Monday - Friday, 8 a.m. to 5 p.m. at 1.800.338.7337 (press #4 to skip the automated message). Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsignal.com.

The Intersecor LED Light is designed to be mounted under the vehicle's side mirrors and provide a warning signal to the front and sides. It can also be surface mounted.

INSTALLATION:

Loosely assemble Intersecor Light, correct wedge block and curve block (P=Passenger, D=Driver's side, Crown Vic and Dodge Charger only) and position assembly below side rear view mirror as shown at left.

Carefully remove light from stack without changing position of wedge block. Mark and drill pilot holes for #6 sheet metal screw.

Drill Ø3/8" hole in mirror shell; if wire is to be routed internally. If wire will be routed external of the mirror shell this step can be ignored.

Dismount mirror from door.

The following is referencing the Ford Explorer but can be applied to other vehicles as well:

After pilot holes for #6 sheet metal screws are drilled a Ø3/8" hole should then be made between the pilot holes. It is important to avoid drilling through the power cable as this will damage the mirror.

Using #6 machine screw, washer and square nut assemble light and appropriate wedge block, curve block (if required) and gasket. Route wire carefully through 3/8" hole and into door. Use appropriate #6 sheet metal screws to attach light to underside of mirror. **DO NOT OVERTIGHTEN SCREWS AS THIS MAY DAMAGE THE MIRROR OR LIGHT.** Mirror may now be replaced on vehicle.

WARNING

This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into the light beam at close range.

NOTICE:

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices.

OPERATION:
For details on operation see page 4.

IMPORTANT:

Supply power through a 3A fuse. For Flashing mode, refer to function tables 1,2 and 3 on page 5. For slave/Remote Node functionality such as when connected to Blueprint, permanently connect the Green wire to ground. Refer to Remote Node functionality table on page 7.

Insulate all connections.


WIRE HOOK-UP TABLE

| WIRE COLOR: | FUNCTION: |
|-----------------|--------------------------------|
| RED | Power (Table pg. 5) |
| BLACK | Ground |
| GREEN** | Sync2 or Remote Node Function* |
| WHITE TO GROUND | Wire Function (See page 4) |
| WHITE TO POWER | Power (Table pg. 5) |
| RED/WHITE | Power (Table pg. 5) |

** To sync multiple Intersecor or NForce lights connect the green wire from each light together.

*Will NOT work w/ other sync products such as Ghost, LED3, & 4-wire Intersecor.

OPERATIONAL CONNECTIONS:

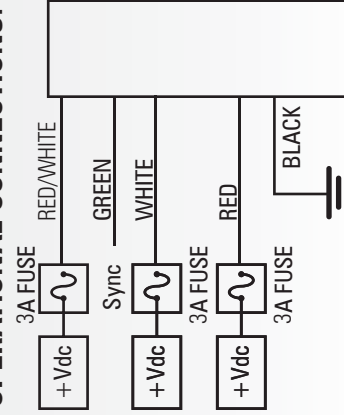


in|ersector

INTERSECTOR LED LIGHT

#ENT2B3(x) Single Light Kit


#ENT2B3(xx)-EU Single Light Kit

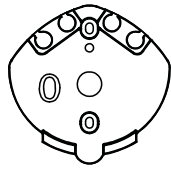


UTILITY BLOCK
0° (HORIZONTAL)*



WEDGE BLOCKS
10° FOR TAHOE*

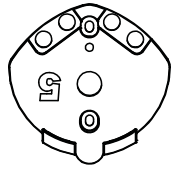


5° FOR CROWN VIC,
IMPALA, CHARGER &
CAPRICE*

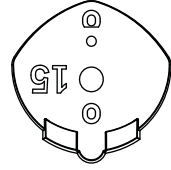


15° FOR 2015+
FORD F150*

* INDICATES FOR WHAT PART WAS DESIGNED. INSTALLATION ON OTHER VEHICLES IS INSTALLER'S RESPONSIBILITY.

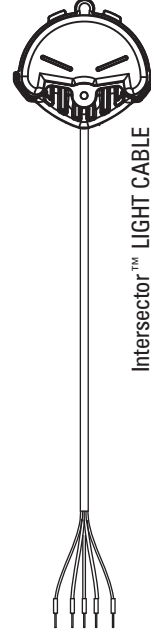

Intersector™ LIGHT CABLE

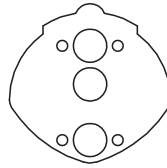

GASKET



DEGREE DESIGNATION IS EMBOSSED IN PART




1" SHEET
METAL SCREW

USE WHEN
THICKER CURVE
BLOCK IS NEEDED
& 3/4" SCREW
IS NOT LONG
ENOUGH



1/2" SHEET
METAL SCREW

USE WHEN
CURVE BLOCK IS
NOT USED

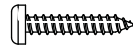

3/4" SHEET
METAL SCREW

USE WHEN
CURVE BLOCK IS
USED



WASHER



3/8" MACHINE
SCREW



3/8" MACHINE SCREW

WASHER



GASKET IS ALWAYS
POSITIONED NEXT TO MIRROR
SHELL

Intersector

INTERSECTOR LED LIGHT

#ENT2B3(xx) Single Light Kit
#ENT2B3(xx)-EU Single Light Kit

ADVANCE PATTERN

Flash pattern can only be changed when the LED module is in a flashing mode (disabled in cruise or steady ON functions). When the light is flashing, momentarily touch the white wire to ground for >250ms and <1s (light will go steady high) then release. The flash pattern will advance to the next pattern. If the light module was at the last pattern, the pattern will reset to the 1st pattern.

BACKUP PATTERN

This function is only valid when the LED module is in a flashing mode (disabled in cruise or steady ON functions). When the light is flashing, momentarily touch the white wire to ground for >1s and < 2s (light will go steady high, steady low) then release. The flash pattern will backup to the previous pattern. If the light module was at the first pattern, the pattern will change to the last pattern on the list.

COLOR SWAP

This function is only valid for dual color light modules and can only be changed when the light module is in a flashing mode (disabled for single color modules and when light module is operating in cruise or steady ON functions). When the light is flashing, momentarily touch the white wire to ground for >2s and <3s (light will go steady high, steady low, off) then release. The light module will switch between Color Swap OFF and Color Swap ON. When Color Swap is OFF, the 1st color will flash 1st on a dual color pattern. When Color Swap is ON, the 2nd color will flash 1st on a dual color pattern.

SIMULTANEOUS/ALTERNATE

This function can only be changed when the LED module is in a flashing mode (disabled in cruise or steady ON functions) and only has an effect when at least 2 LED modules have the green sync wire connected together. When the light is flashing, momentarily touch the white wire to ground for >3s and <4s (light will go steady high, steady low, off, steady high) then release. The light module will switch between Simultaneous and Alternate each time this sequence is done. To have light modules flash simultaneously, both light modules need to be set to the same sequence type (Set-Up Table). To have light modules flash alternately, the light modules need to be set to different sequence types (Set-Up Table).

PATTERN RESET

This function is only valid when the LED module is in a flashing mode (disabled in cruise or steady ON functions). When the light is flashing, momentarily touch the white wire to ground for >5s and <6s (light will go steady high, steady low, off, steady high, steady low, off) then release. The flash pattern will reset to the 1st pattern in the list.

FACTORY RESET

This function is only valid when the LED module is in a flashing mode (disabled in cruise or steady ON functions). When the light is flashing, momentarily touch the white wire to ground for >6s and <7s (light will go steady high, steady low, off, steady high, steady low, off, steady high) then release. The LED module will reset to: pattern=1, Function Table=1, Color Swap=OFF, Simultaneous.

SETUP TABLE

| SECONDS | | USER INTERFACE | |
|---------|----|---------------------|--|
| FROM | TO | VISUAL FEEDBACK | ACTION TAKEN |
| 0 | 1 | STEADY-HIGH (60%) | FORWARD ONE PATTERN |
| 1 | 2 | STEADY-LOW (30%) | BACKWARD ONE PATTERN |
| 2 | 3 | OFF | COLOR SWAP (OFF OR ON) |
| 3 | 4 | STEADY - HIGH (60%) | SEQUENCE TYPE: SIMULTANEOUS OR ALTERNATE |
| 4 | 5 | STEADY - LOW (30%) | SEE FUNCTION TABLE |
| 5 | 6 | OFF | RESET TO PATTERN 1 |
| 6 | 7 | STEADY-HIGH (60%) | FACTORY RESET (PATTERN 1, COLOR SWAP: OFF, SIMULTANEOUS) SEPARATE COLOR CONTROL: OFF |

If held longer than 7 seconds, the light will go back to flashing the current pattern and no action will be taken.

Intersector

INTERSECTOR LED LIGHT

#ENT2B3(xx) Single Light Kit

#ENT2B3(xx)-EU Single Light Kit

FUNCTION TABLES

Changing the function table is only enabled when the LED module is in a flashing mode (disabled in cruise or steady ON functions). The functional operation of the LED module can be changed while applying +vdc to the Red wire with the black wire connected to ground. When the light is flashing, momentarily touch the White wire to ground for > 4s and < 5s (light will go steady high, steady low, off, steady high, steady low) then release. The function table will now advance to the next table (table 1 to table 2, table 2 to table 3, or table 3 to table 1). Repeat above process until required function table is active.

FUNCTION TABLE 1

| WIRE | | | LIGHT |
|------|---------------|-------|------------------|
| RED | RED/ WHITE | WHITE | SINGLE |
| +12V | | | FLASH |
| | +12 | | CRUISE |
| +12V | +12V | | FLASH |
| | | +12V | NO OP |
| +12V | | +12V | LOW PWR FLASH |
| | +12V | +12V | CRUISE |
| | | | FLASH DUAL |
| | | | STEADY COLOR 2 |
| | | | STEADY COLOR 2 |
| | | | NO OP |
| | | | FLASH COLOR 1 |
| | | | FLASH COLOR 2 |

FUNCTION TABLE 2

| WIRE | | | LIGHT |
|------|---------------|-------|-----------------|
| RED | RED/ WHITE | WHITE | SINGLE |
| +12V | | +12V | CRUISE |
| | +12V | | STEADY CLR 1 |
| | +12V | +12V | STEADY CLR 1 |
| | | +12V | NO OP |
| +12V | | | FLASH |
| | | | FLASH DUAL |
| | | | STEADY COLOR 2 |
| | | | STEADY COLOR 2 |
| | | | NO OP |
| | | | FLASH COLOR 1 |

FUNCTION TABLE 3

| WIRE | | | LIGHT |
|------|---------------|-------|--------------------|
| RED | RED/ WHITE | WHITE | SINGLE |
| +12V | | | FLASH |
| | +12V | | FLASH LOW PWR |
| +12V | +12V | | FLASH LOW PWR |
| | | +12V | NO OP |
| +12V | | +12V | FLASH LOW PWR |
| | +12V | +12V | FLASH LOW PWR |
| +12V | +12V | +12V | FLASH LOW PWR |
| | | | FLASH DUAL |
| | | | FLASH DUAL LOW PWR |
| | | | FLASH DUAL LOW PWR |
| | | | NO OP |
| | | | FLASH DUAL LOW PWR |
| | | | FLASH DUAL LOW PWR |
| | | | FLASH DUAL LOW PWR |
| | | | FLASH DUAL LOW PWR |

Intersector

INTERSECTOR LED LIGHT

#ENT2B3(xx) Single Light Kit

#ENT2B3(xx)-EU Single Light Kit

SYNC 2

Synchronizing the flashing of multiple light modules is accomplished by connecting the Green wires of different light modules together. Up to 24 light modules can be connected for synchronized flashing. All light module flash patterns must be set to the same flash pattern # to ensure proper operation. Refer to the Sequence Type section in Set-Up table to setup light modules to flash in alternate or simultaneous flash pattern.
NOTE: Will NOT work with Sync products such as Ghost, LED3, 4-wire Intersector.

| FLASH PATTERNS | | |
|----------------|--------------|---|
| PATTERN # | SINGLE COLOR | DUAL COLOR |
| 1 | | QUINT |
| 2 | | WARP |
| 3 | | INTER-CYCLE |
| 4 | | DOUBLE |
| 5 | | QUAD |
| 6 | | POWER PULSE |
| 7 | | ROAD RUNNER |
| 8 | | Q-SWITCH |
| 9 | | STEADY-BURN / ROADRUNNER (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: ROADRUNNER) |
| 10 | | STEADY-BURN DRIVER / TITLE 13 QUAD (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: TITLE 13 QUAD) |
| 11 | | QUAD 2 |
| 12 | | DOUBLE 2 |
| 13 | | RANDOM 1 |
| 14 | | RANDOM 2 |

Intersecor

INTERSECTOR LED LIGHT

#ENT2B3(xx) Single Light Kit

#ENT2B3(xx)-EUSingle Light Kit

REMOTE MODE: FOR USE WITH bluePRINT SYSTEM ONLY

Connecting the Green wire to ground before applying power to the Red or Red/White wires will place the LED module into remote mode and the light output color will be directly controlled by the input wires as shown below.

For Cruise mode or Low Power control of the LED module, the signal to the control wires must be 100 +/- 2Hz using the duty cycle inputs listed below to produce the light output.

| Intersecor LED Light Remote Mode Functionality | | | | | |
|--|---------------|-------------------|---------------|--|--|
| Red Wire | Red/Whit Wire | Single Color | | Dual Color | |
| | | Color Swap=OFF | Color Swap=ON | Color Swap=OFF | Color Swap=ON |
| Cruise | - | Cruise Color 1 | | Cruise Color 1 | Cruise Color 2 |
| - | Cruise | | | Cruise Color 2 | Cruise Color 1 |
| Cruise | Cruise | | | Cruise Color 2 | Cruise Color 1 |
| Flash | - | Flash Color 1 | | Flash Color 1 | Flash Color 2 |
| - | Flash | | | Flash Color 2 | Flash Color 1 |
| Flash | Flash | | | Flash Color 2 | Flash Color 1 |
| Steady ON | - | Steady ON Color 1 | | Steady ON Color 1 | Steady ON Color 2 |
| - | Steady ON | | | Steady ON Color 2 | Steady ON Color 1 |
| Steady ON | Steady ON | | | Steady ON Color 2 | Steady ON Color 1 |
| Cruise | Flash | | | Flash Color 2/ Cruise Color 1 during OFF cycle of Flash | Flash Color 1/ Cruise Color 2 during OFF cycle of Flash |
| Cruise | Steady ON | | | Steady ON Color 2 | Steady ON Color 1 |
| Flash | Steady ON | | | Steady ON Color 2 | Steady ON Color 1 |

Cruise Mode Duty Cycle (@ 100Hz)

| Input | Light Output |
|-------|--------------|
| 40% | OFF |
| 50% | 5% |
| 60% | 10% |

Low Power Flash D.C. (@ 100Hz)

| Input | Light Output |
|-------|--------------|
| 70% | 30% |
| 80% | 40% |
| 90% | 50% |

by SoundOff Signal

Intersecor

INTERSECTOR LED LIGHT

#ENT2B3(xx) Single Light Kit
#ENT2B3(xx)-EU Single Light Kit

OVER-VOLTAGE PROTECTION

When an over-voltage condition is detected, the module will flash an over-voltage warning pattern of 50mS ON/950mS OFF to alert of the over-voltage condition and protect the electronics from damage due to heat/voltage.

THERMAL COMPENSATION PROTECTION

The LED module is designed to provide maximum power output while providing protection to the electronic components by reducing the output power at extreme temperatures.

TECHNICAL SPECIFICATIONS

| INTERSECTOR | |
|--|--|
| Single Mount Dimensions: | 2.9" (74 mm) W x 1.9" (48 mm) H x 2.9" (74 mm) D |
| Input Voltage: | 10 - 16 Vdc |
| CURRENT CONSUMPTION PER MODULE | |
| | 10-16 Vdc |
| 9 LED Single Color 18 LED Dual Color | < 1.25A @12.8 Vdc |
| AFTER POWER IS ON , touching the WHITE wire to the ground will allow you to change various settings on the module. (refer to pages 3 & 4) | |

Parts & Accessories:

Univ. Curved Surface Adaptors #PNT1CRV01 (pair)
Chevrolet Caprice Adaptors #PNT1CRV02 (pair)
Dodge Charger Adaptors #PNT1CRV03 (pair)
Ford Interceptor Sedan Adaptors #PNT1CRV04 (pair)
Ford Interceptor SUV Adaptors #PNT1CRV05 (pair)
Wedges (0°, 5° & 10°) #PNT1WVG (set of 3)
Intersector™ (light only) #PENT2B0(x)

Soundoff
Signal
Smart Design.

1.800.338.7337 / www.soundoffsignal.com

NOTICE:

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices.

*Improper use or installation may void warranty coverage. To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/sales-support. If you have questions regarding this product, contact **Technical Services**, Monday - Friday, 8 a.m. to 5 p.m. at **1.800.338.7337** (press #4 to skip the automated message). Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsignal.com.*

SUPERIOR CUSTOMER RELATIONSHIPS. SMARTLY DESIGNED LIGHTING & ELECTRONIC SOLUTIONS.