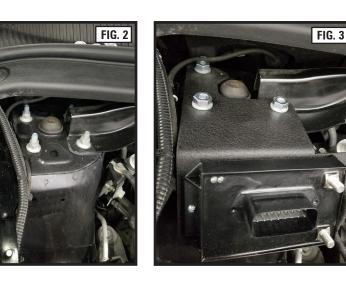# bluePRINT® REMOTE NODE BRACKET

ENGBRK01 - Single Remote Node Bracket, 2016-2019 Ford Utility*
ENGBRK02 - Dual Remote Node Bracket, 2016-2019 Ford Utility

*Pictured Below

FIG. 1

FIG. 2

FIG. 3

INSTALLATION:

1. Mount Remote Node to bracket.
2. Place bracket over stud mounts on vehicle.
3. Fasten with provided nuts.

⚠ WARNING

• HIGH CURRENT interconnects must be properly terminated. Poor crimp quality can cause heat build-up and fire. Follow crimp connector manufacturer instructions.

• DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to vehicle Owner's Manual for deployment zones.

• Do NOT use system to disconnect headlights, brake lights or other safety equipment.

• Unit may become hot to touch during normal operation.

• Failure to properly install connectors, fuses or wiring may cause vehicle failure or fire.

• Installation must only be performed by trained technician. Installer must determine vehicle wiring configuration and proper integration of system.

• Use proper wire gauge. All power wires connecting to positive (+) or negative (-) battery terminal or local chassis ground (-) must be sized to supply at least 125% of max. current and properly fused at power source.

• Install protective grommets when routing wire through firewall or metal.

SoundOff Signal®

1.800.338.7337 / www.soundoffsignal.com

SUPERIOR CUSTOMER RELATIONSHIPS. SMARTLY DESIGNED LIGHTING & ELECTRONIC SOLUTIONS.