

## LED Undercover RF Fix



**Figure 1 – Feed Through**



**Figure 2 – First Loop**



**Figure 3 – Second Loop**

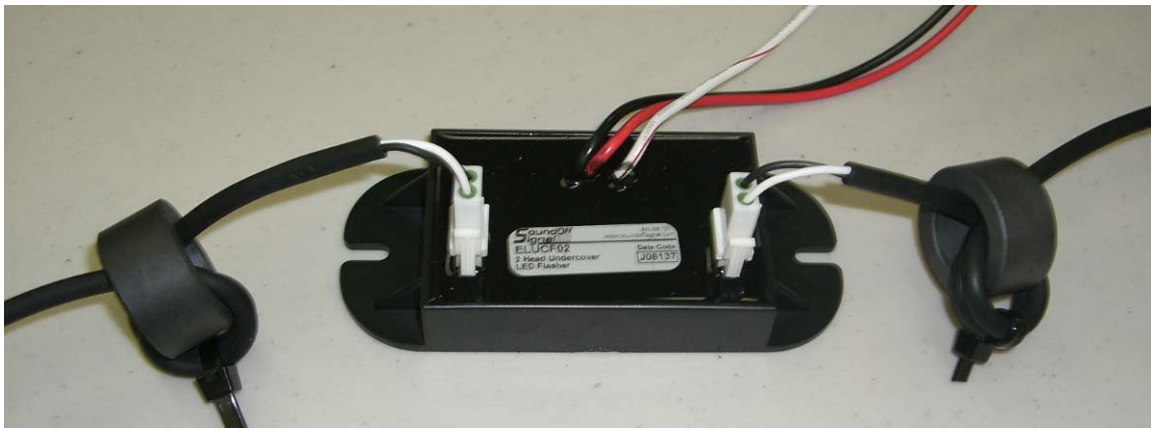


**Figure 4 – Zip-tied Wire**

**NOTE:** For maximum efficiency, place the ferrite bead AS CLOSE AS POSSIBLE to the flasher

### Instructions:

1. Feed wire through ferrite bead (Figure 1)
2. Loop the wire through the bead twice (Figure 2 and 3)
3. Tighten loops as much as possible and zip-tie (Figure 4)
4. Repeat all steps for second wire
5. Connect wires to flasher (Figure 5)



**Figure 5 – Finished Flasher**