




**UNIVERSAL UNDERCOVER™  
SURFACE MOUNT BEZEL**

PLUC2HS(x)



EACH SURFACE MOUNT  
BEZEL KIT INCLUDES:  
1 - Bezel  
1 - Foam Gasket  
2 - Screws

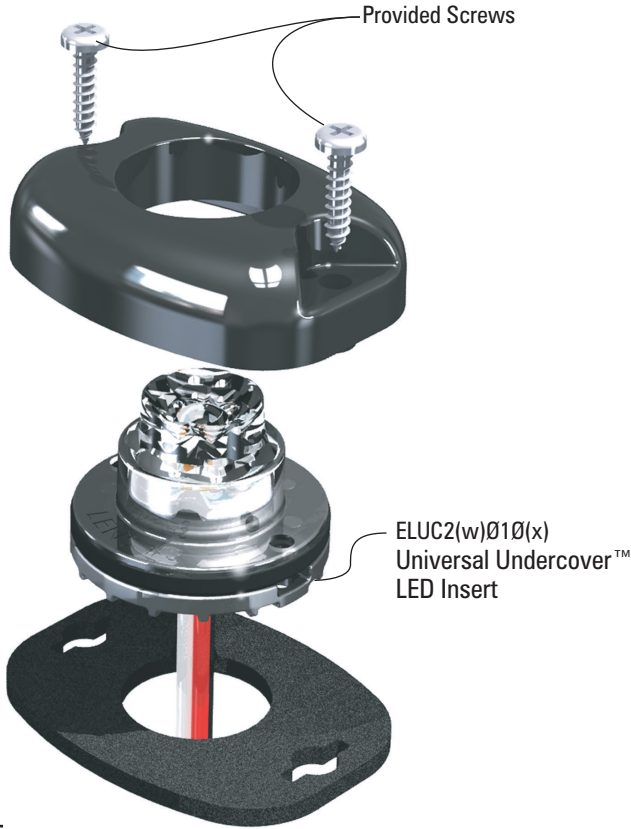

**Replacement Parts & Accessories:** \_\_\_\_\_

ELUC2(w)Ø1Ø(x)

**⚠ WARNING** \_\_\_\_\_

- HIGH CURRENT interconnects must be properly terminated. Poor crimp quality can cause heat build-up and fire. Follow crimp connector manufacturer instructions.
- DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to vehicle Owner's Manual for deployment zones.
- Do NOT use system to disconnect headlights, brake lights or other safety equipment.
- Unit may become hot to touch during normal operation.
- Failure to properly install connectors, fuses or wiring may cause vehicle failure or fire.
- Installation must only be performed by trained technician. Installer must determine vehicle wiring configuration and proper integration of system.
- Use proper wire gauge. All power wires connecting to positive (+) or negative (-) battery terminal or local chassis ground (-) must be sized to supply at least 125% of max. current and properly fused at power source.
- Install protective grommets when routing wire through firewall or metal.

**NOTICE:**

Installers and users must comply with all applicable federal, state and local laws regarding use and installation of warning devices.

*Improper use or installation may void warranty coverage. To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at [www.soundoffsignal.com/sales-support](http://www.soundoffsignal.com/sales-support). If you have questions regarding this product, contact **Technical Services**, Monday - Friday, 8 a.m. to 5 p.m. or after hours 5 p.m. to 8 p.m. EST at 1.800.338.7337 (press #4 to skip the automated message). Questions or comments that do not require immediate attention may be emailed to [techservices@soundoffsignal.com](mailto:techservices@soundoffsignal.com).*

**MOUNTING INSTRUCTIONS**

The Undercover Bezel is designed to work **ONLY** with the Universal Undercover™ LED Insert.

1. Locate an area on the vehicles surface that is flat.
2. Using bezel as template mark and drill two pilot holes for #6 screws.
3. Drill Ø1" hole for wires and flasher centered between the two pilot holes from step #2.
4. Install the Universal Undercover™ LED Insert in the bezel and thread wires as shown.
5. Make electrical connections (see instruction sheet for the Universal Undercover™ LED Insert).
6. Finish installation by screwing bezel to surface. **DO NOT OVER TIGHTEN!**

