





SINGLE SURFACE MOUNT BRACKETS
 PNFFTBK2LPH - LICENSE PLATE HORIZONTAL BRACKET
 PNFFTBK2LPV - LICENSE PLATE VERTICAL BRACKET

The SoundOff Signal license plate bracket are designed to fit under the rear license plate and support 2 nForce Fit lights (**NOT INCLUDED**)

The nForce Fit light is designed to mount the lights horizontally and also allows the lights to be mounted vertically.

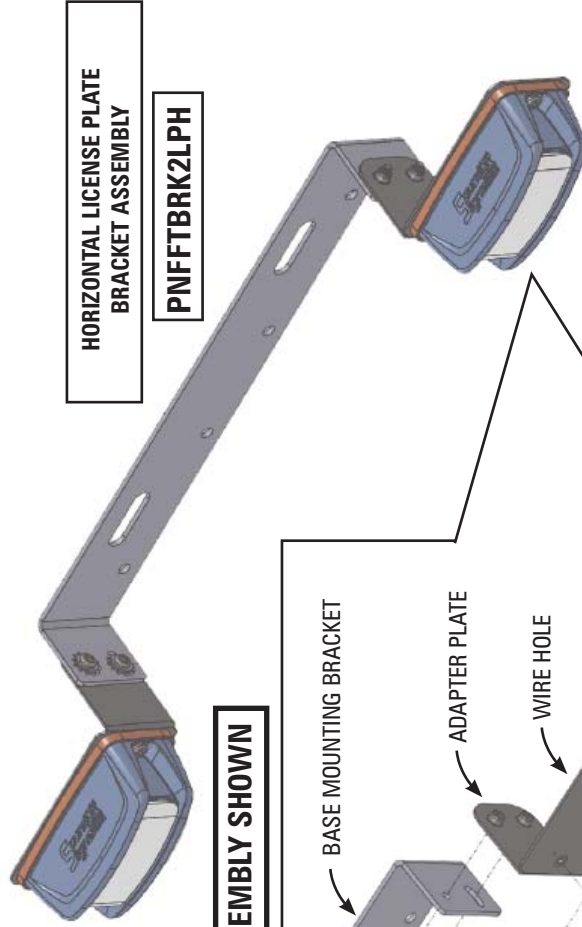

HORIZONTAL ASSEMBLY SHOWN

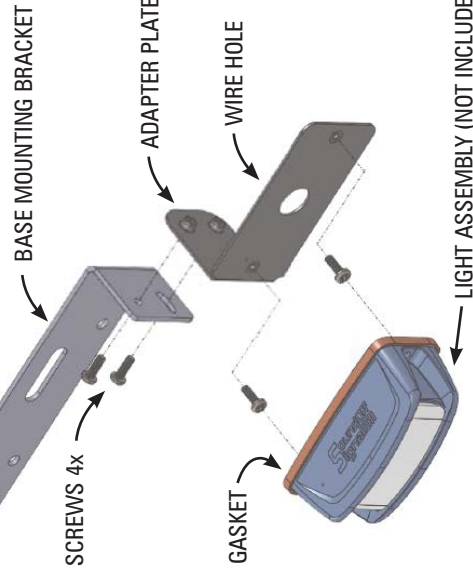

HORIZONTAL LICENSE PLATE BRACKET ASSEMBLY

PNFFTBK2LPH


WARNING
 This product contains high intensity LED devices. To prevent eye damage, DO NOT stare into the light beam at close range.

IMPORTANT INFORMATION:

Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance. To review our *Limited Warranty Statement & Return Policy* for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/sales-support. If you have questions regarding this product, contact **Technical Services**, Monday - Friday, 8 a.m. to 5 p.m. at 1.800.338.7337 (press #4 to skip the automated message). Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsignal.com.

INSTALLATION INSTRUCTIONS:

- 1) Remove license plate from vehicle
- 2) Determine whether you want to mount the light inward (toward the license plate) or outward (away from the license plate).
- 3) Determine the location where you want the power cable to exit the vehicle and drill a 5/16" hole for wire routing.
- 4) Screw nForce Mini light to adapter plate as shown using supplied screws.
- 5) Screw adapter plate (with mounted nForce Fit light) to base mounting bracket using supplied screws.
- 6) Route wires through hole created in step 3.
- 7) Fasten bracket with license plate on top to vehicle using license plate screws removed in step 1. Extra holes are provided for heavy duty mounting.
- 8) Wire the lights according to the nForce Minilight instructions.

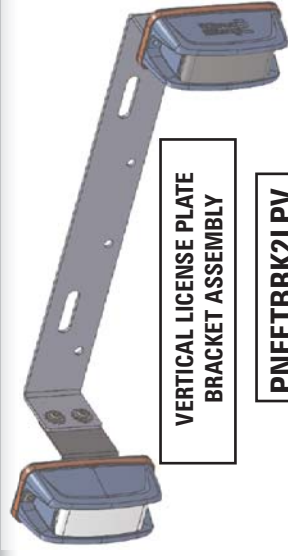

VERTICAL LICENSE PLATE BRACKET ASSEMBLY

PNFFTBK2LPV

LICENSE PLATE BRACKET FIT CHART

VEHICLES	REAR FIT		FRONT FIT	
	HORIZONTAL BRACKET	VERTICAL BRACKET	HORIZONTAL BRACKET	VERTICAL BRACKET
CHEVROLET				
CAPRICE	X	X	X	X
IMPALA	X	X	X	X
SILVERADO 1500	X	X	X	X
SILVERADO 2500	X	X	X	X
TAHOE/ SUBURBAN	X	X	X	X
COLORADO	X	X	X	X
VOLT	X	X	X	X
CRUZE	X	X	X	X
EQUINOX	X	X	X	X
MALIBU	X	X	X	X
FORD				
EXPLORER	X	X	X	X
TAURUS	X	X	X	X
F150		X	X	X
F250		X	X	X
EXPEDITION		X	X	X
FUSION	X	X	X	X
ESCAPE	X	X	X	X
TRANSIT	X	X	X	X
CHRYSLER				
RAM	X	X	X	X
CHARGER	X	X	X	X
DURANGO	X	X	X	X

IMPORTANT INFORMATION:

Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances. These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance. To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product, visit our website at www.soundoffsignal.com/sales-support. If you have questions regarding this product, contact **Technical Services**, Monday - Friday, 8 a.m. to 5 p.m. at 1.800.338.7337 (press #4 to skip the automated message). Questions or comments that do not require immediate attention may be emailed to techservices@soundoffsignal.com.